


Use the 4 Front Panel/Circuit Board Screw Hole Shown to position the Template.

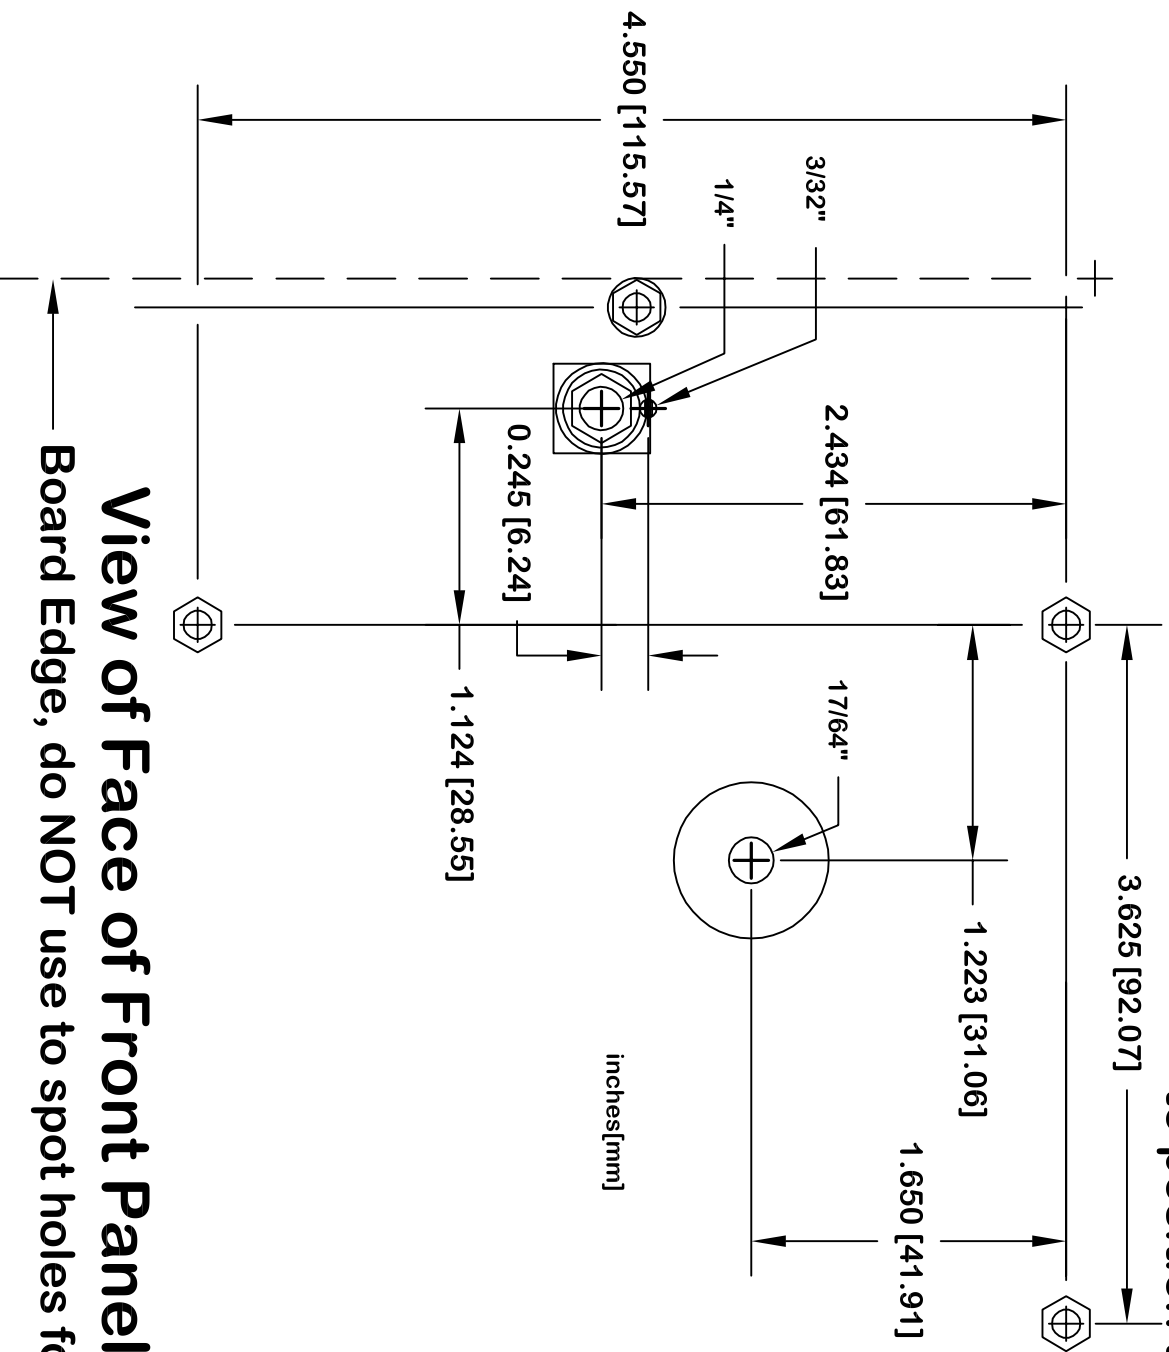

View of Face of Front Panel
Board Edge, do NOT use to spot holes for drilling.